

# DESAY



## OWNER'S MANUAL

MODEL:DS-5701



**N** Please read all warnings and instructions carefully before operating this unit.

## TABLE OF CONTENTS

### BEFORE USE

Safety Precautions .....	01
Important Safety Instructions .....	03
Notice .....	04
Disc Protection .....	04
Playable Discs .....	05
Accessories .....	05

### CONTROL and CONNECTION

Panel .....	06
Basic connection .....	07
Remote control .....	08

### BASIC PLAYBACK

Preparations .....	09
Basic Playback .....	09
Stop Playback .....	09
Previous and Next .....	09
Fast forward and Fast reverse .....	09
Pause/Step Playback .....	09

### Advanced Playback

OSD .....	10
V.MODE .....	10

SUBTITLE .....	10
TITLE .....	10
ANGLE .....	10
SEARCH .....	10
VOLUME and MUTE .....	10
REPEAT .....	10
MENU .....	10
ZOOM .....	10
PROGRAM .....	10
AUDIO .....	11
A-B REPEAT .....	11

### SPECIAL FUNCTION PLAYBACK

JPEG Disc Playback .....	11
MP3 Playback .....	11
Kodak Picture Disc Playback .....	11

### REFERENCE

System Setup .....	12
Trouble Shooting .....	17
DVD Characteristics .....	18
Special Function of DVD .....	19
Function Supported by DVD Discs .....	19
Specification .....	20



The lightning flash with arrowhead symbol, within an equilateral triangle, is intended to alert the user to the presence of uninsulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.



The symbol for CLASS II (Double Insulation).

**WARNING:**

**TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, DO NOT EXPOSE THIS APPLIANCE TO RAIN OR MOISTURE, DANGEROUS HIGH VOLTAGES ARE PRESENT INSIDE THE ENCLOSURE. DO NOT OPEN THE CABINET, REFER SERVICING TO QUALIFIED PERSONNEL ONLY.**

**CAUTION:**

When replace the direct plug in power supply or a separable, cord-connected power supply, the replacement must be exact duplicate, or one recommended by the manufacturer.

**TO PREVENT ELECTRIC SHOCK, MATCH WIDE BLADE OF PLUG TO WIDE SLOT, FULLY INSERT.**

This Digital Video Disc player employs a laser System.

Use of controls, adjustments or the performance of procedures other than those specified may result herein hazardous radiation exposure. To prevent direct exposure to laser beam, do not try to open the enclosure. Visible laser radiation when open and interlocks defeated.

**DO NOT STARE INTO BEAM.**

**FCC NOTICE:**

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rule. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.



This product incorporates copyright protection technology that is protected by method claims of certain U. S. Patents and other intellectual property rights owned by Macrovision Corporation and other rights owners. Use of this copyright protection technology must be authorized by Macrovision Corporation, and is intended for home and other limited viewing uses only unless otherwise authorized by Macrovision Corporation. Reverse engineering or disassembly is prohibited.

Consumers should note that not all high definition television sets are fully compatible with this product and may cause artifacts to be displayed in the picture.

In case of 525 or 625 progressive scan picture problems, it is recommended that he used switch the connection to the "standard definition" output. If there are questions regarding our TV set compatibility with this model 525p and 625p DVD player, please contact our customer service centre.



Manufactured under license from Dolby Laboratories. "Dolby" and the double-D symbol are trademarks of Dolby Laboratories. Confidential unpublished works. Copyright 1992-1997 Dolby Laboratories. All rights reserved.

**CAUTION: PLEASE READ AND OBSERVE ALL WARNINGS AND INSTRUCTIONS GIVEN IN THIS MANUAL AND THOSE MARKED ON THE UNIT. RETAIN THIS BOOKLET FOR FUTURE REFERENCE.**

This set has been designed and manufactured to assure personal safety. Improper use can result in electric shock or fire hazard. The safeguards incorporated in this unit will protect you if you observe the following procedures for installation, use and servicing. This unit is fully transistorized and does not contain any parts that can be repaired by the user.

**DO NOT REMOVE THE CABINET COVER OR YOU MAY BE EXPOSED TO DANGEROUS VOLTAGE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL ONLY.**

#### **1.Read these manuals**

After unpacking this product, read the manual carefully. Follow all the operating and other instructions.

#### **2.Ventilation**

Slots and openings in the cabinet are provided for ventilation and to ensure operation of the product. These protect it from overheating. These openings must not be blocked or covered. The openings should never be blocked by placing the product a Bed, sofa, rug or other.

#### **3.Heat**

The product should be situated away from heat sources such as radiators, heat registers, stoves, or other products (including amplifiers) that produce heat.

#### **4.Water and Moisture**

Do not use this product near water for example, near a bathtub, wash bowl, kitchen sink, or laundry tub, in a wet basement or near a swimming pool.

#### **5.Cleaning**

Unplug this product from the wall outlet before cleaning. Do not use liquid cleaners or aerosol cleaners. Use a dry cloth for cleaning.

#### **6.Power-cord protection**

Power-supply cords should be routed so that they are not likely to be walked on or pinched by items placed upon or against them. Paying particular attention to cords at plugs, convenience receptacles, and the point where they exit from the product.

#### **7.Lightning**

For added protection for this product during storm, or when it is left unattended and unused for long periods of time, unplug it from the wall outlet. This will prevent damage to the product due to lightning and power-line surges.

#### **8.Object and Liquid entry**

Never push objects of any kind into this product through openings as they may touch dangerous voltage points or short-out parts that could result in a fire or electric shock. Never spill liquid of any kind on the product.

#### **9.Attachments**

Do not use attachments not recommended by the product manufacturer as they may cause hazards.

#### **10.Accessories**

Do not place this product on an unstable cart, stand, tripod, bracket, or table. The product may fall, causing serious injury to a child or adult, and serious damage to the product. Use only with a cart, stand, tripod, bracket, or table recommended by the manufacturer, or sold with

the product. Any mounting of the product should follow the manufacturer's instructions, and should use a mounting accessory recommended by the manufacturer. A product and cart combination should be moved with care. Quick stops, excessive force, and uneven surfaces may cause the product and cart combination to overturn.



#### **11.Disc tray**

Keep your fingers well clear of the disc tray as it is closing. Neglecting to may cause serious personal injury and damage to the product.

#### **12.Burden**

Do not place a heavy object on or step on the product. The object may fall causing serious personal injury and serious damage to the product.

#### **13.Damage Requiring Service**

Unplug this product from the wall outlet and refer servicing to qualified service personnel under the following conditions:

- a) When the power-supply cord or plug is damaged.
- b) If liquid has been spilled, or objects have fallen into the product.
- c) If the product has been exposed to rain or water.
- d) If the product does not operate normally by following the operating instructions. Adjust only those controls that are covered by the operating instructions as an improper adjustment of other controls may result in damage and will often require extensive work by a qualified technician to restore the product to its normal operation.
- e) If the product has been dropped or damaged in any way.
- f) When the product exhibits a distinct change in performance - this indicates a need for service.

#### **14. Servicing**

Do not attempt to service this product yourself as opening or removing covers may expose you to dangerous voltage or other hazards. Refer all servicing to qualified service personnel.

#### **15. Replacement Parts**

When replacement parts are required, be sure the service technician has used replacement parts specified by the manufacturer or have the same characteristics as the original part. Unauthorized substitutions may result in fire, electric shock, or other hazards.

#### **16.Safety Check**

Upon completion of any service or repairs to this product, ask the service technician to perform safety checks to determine that the product is in proper operating condition.

### NOTES ON HANDLING

- The top and rear panels of the unit may become warm after a long period of use. This is not a malfunction.
- When the unit is not use, be sure to remove the disc and turn off the power.
- If you do not use the unit for a long period, the unit may not function properly in the future. Turn on and use the unit occasionally.
- Do not place foreign objects on the tray.

### LOCATION

Do not locate the unit in places such as:

- Near heating devices or in enclosed car.
- High temperature (40°C or higher) or high humidity (90% or higher).
- Dirty places.
- Avoid direct exposure to sunshine

### DISTURBANCE

 
 
When you place this unit near a TV, radio or VCR, the playback picture may become poor and the sound may be distorted. In this case, place the unit away from the TV, radio or VCR.

### NOTES ON MOISTURE CONDENSATION

The pickup may be condensed with water under the following situation.

- When you bring the unit directly from a cold place to a warm place.
- When you use the unit in a room where you just turned on the heater, or a place where the cold air from the air conditioner directly hits the unit.
- During the summer, when you use the unit in a hot and humid place just after you move the unit from an air conditioned room.
- The room is vaporous or damp.

If condensation exists, the unit will not operate properly. Remove the disc, connect the power cord of the unit to the wall outlet, turn on the unit, and leave it for two or three hours. After two or three hours, the unit will have warmed up and evaporated any moisture. Keep the unit connected to the wall outlet and moisture condensation will seldom occur.



### ON HANDLING DISCS

- Do not touch the playback side of the disc.
- Do not attach paper or tape to disc.



### ON CLEANING DISCS

- Fingerprints and dust on the disc cause picture and sound deterioration. Wipe the disc from the centre outwards with a soft cloth. Always keep the disc clean.



 
- If you can not wipe off the dust with a soft cloth, wipe the disc lightly with a slightly moistened soft cloth and finish with a dry cloth.
- Do not use any type of solvent such as thinner, benzine, commercially available cleaners or antistatic spray for vinyl Lps. It may damage the disc.

### ON STORING DISCS

- Do not store discs in a place subject to direct sunlight or near heat source.
- Do not store discs in place subject to moisture and dust such as a bathroom or near a humidifier.
- Store discs vertically in a case. Stacking or placing object on discs outside or their case may cause warping.

### STRUCTURE OF DISC CONTENTS



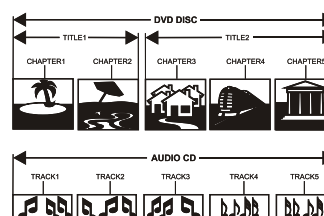




Normally, DVD discs are divided into titles, and the titles are sub-divided into chapters. Audio CD are divided into tracks.



Each title, chapter, or track is assigned a number, which is called title number, chapter number or track number respectively.

There may be discs that do not have these number.

The following discs can be played:

DISCS	LABEL	CONTENTS	DISCS	LABEL	CONTENTS
DVD VIDEO		Audio +Video (moving picture)	WMA		Audio
AUDIO CD		Audio	CD-R		Audio or Video
JPEG		Video(picture)	CD-RW		Audio or Video
MP3	<b>MP3</b>	Audio	CD+G	<b>CD+G</b>	Audio
KODAK CD		Video(picture)			


- Discs than those listed above can not be played.
- Non-standardized discs, even if they may be labeled as above can not be played.
- The performance of recorded disc is depend on the method and quality of disc-burning. In some cases, the disc may not be played.

## ACCESSORIES

 
- Audio/Video cable ..... 1
- Remote control ..... 1
- Owner's manual ..... 1



Audio/Video cable

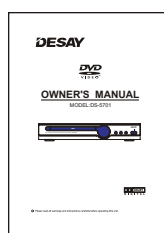


Owner's manual

 


Remote control

## FRONT PANEL

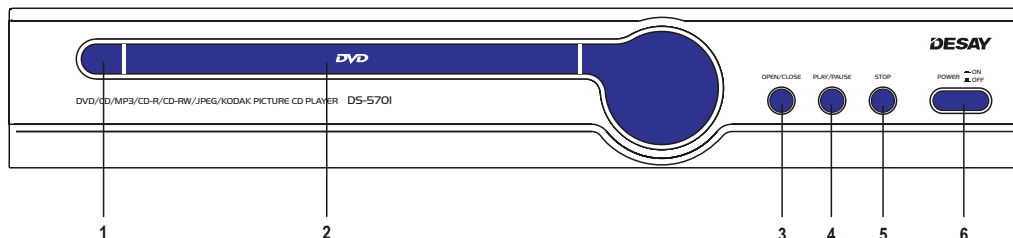 

- |                          |                 |
|--------------------------|-----------------|
| 1. REMOTE CONTROL SENSOR | 4. PLAY/PAUSE   |
| 2. TRAY                  | 5. STOP         |
| 3. OPEN/CLOSE            | 6. POWER SWITCH |

## REAR PANEL OUTPUT

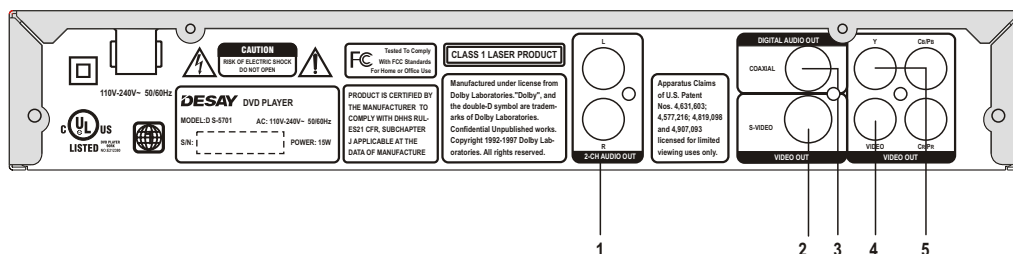 


- |                      |                           |
|----------------------|---------------------------|
| 1. 2 CHANNELS OUTPUT | 4. VIDEO OUTPUT           |
| 2. S-VIDEO OUTPUT    | 5. Y, CB/PB, CR/PR OUTPUT |
| 3. COAXIAL OUTPUT    |                           |




## BASIC CONNECTION
 
### ● Connecting to a TV with Audio/Video cable

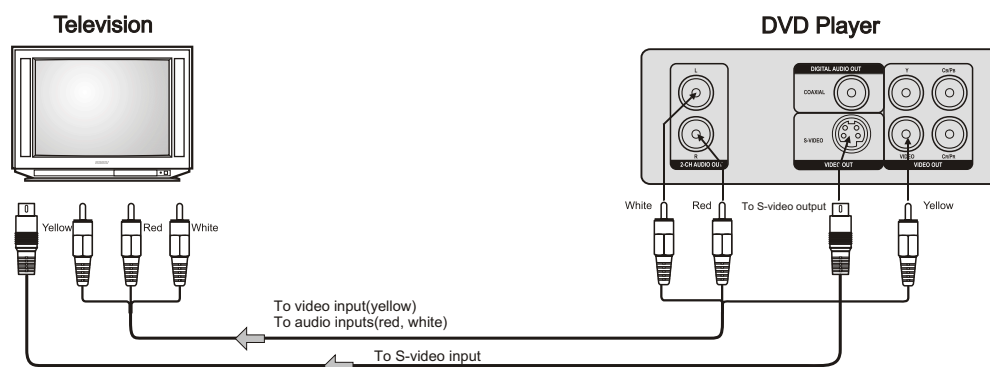



If the TV has an S-video input, connect the DVD player with an S-video cable.  
When using an S-video cable, do not connect the yellow video cable.

### ● Connecting to a audio system and TV equipped with YUV video input

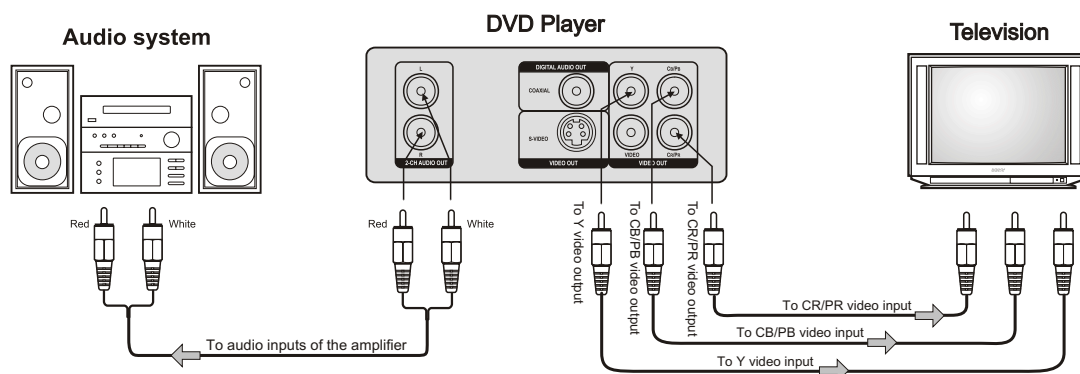 

### ● Connecting to an amplifier equipped with a digital audio input and TV

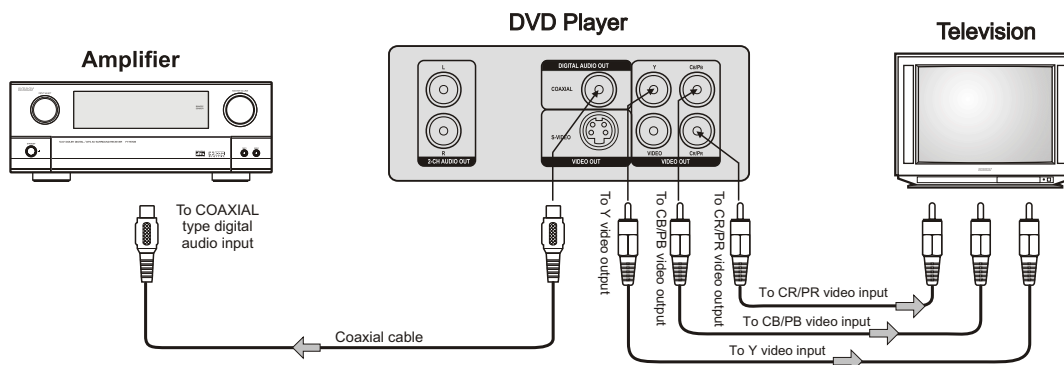 

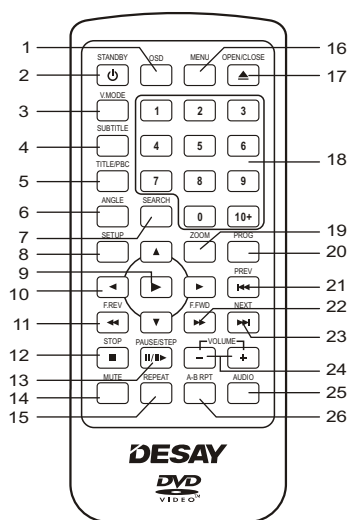 **REMOTE CONTROL**

**Function**

1. OSD(On Screen Display)
2. STANDBY
3. V.MODE
4. SUBTITLE
5. TITLE/PBC
6. ANGLE
7. SEARCH
8. SETUP
9. ENTER/PLAY
10. CURSOR → LEFT
11. FAST REVERSE
12. STOP
13. PAUSE/STEP

**Function**

 
14. MUTE
15. REPEAT
16. MENU
17. OPEN/CLOSE
18. DIGITS AND 10+ BUTTONS
19. ZOOM
20. PROGRAM
21. PREVIOUS
22. FAST FORWARD
23. NEXT
24. VOLUME+/- (Volume control)
25. AUDIO
26. A-B REPEAT


**Loading Batteries**

1. Open the cover.
2. Insert batteries.  
Make sure to match the + and - on the batteries to the marks inside the battery compartment.
3. Close the cover.


**Notes on batteries**

- Do not insert batteries into the remote control in the wrong direction.
- Do not charge, heat, open, or short-circuit the batteries. Do not throw batteries into a fire.
- If the remote control does not function correctly or if the operating range becomes reduced, replace all batteries with new ones.

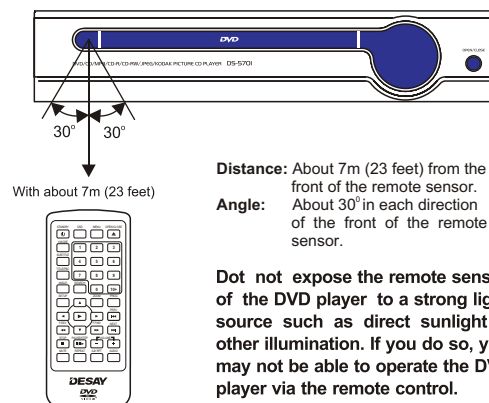**Operating With The Remote Control**


**Distance:** About 7m (23 feet) from the front of the remote sensor.  
**Angle:** About 30° in each direction of the front of the remote sensor.

**Do not expose the remote sensor of the DVD player to a strong light source such as direct sunlight or other illumination. If you do so, you may not be able to operate the DVD player via the remote control.**

**Notes on the remote control**

- Direct the remote control at the remote sensor of the DVD player.
- Do not drop or give the remote control a shock.
- Do not leave the remote control near an extremely hot or humid place.
- Do not spill water or put anything wet on the remote control.
- Do not open the remote control.

### Preparations

- When you want to view a disc, turn on the TV and select the video input connected to the DVD player.

### Basic playback

1. Press POWER switch on the front panel to ON, the DVD player turns on, the TV screen will display the start logo and DVD indicator light. If a disc is already in the tray, it will begin to play once the power is on.
2. Press OPEN/CLOSE ▲ to open the disc tray, place a disc on the disc tray.
  - There are two different disc sizes. Place the disc in the correct guide on the disc tray. If the disc is out of the guide, it may damage the disc and cause the DVD player to malfunction.
  - Do not place a disc which is unplayable in this DVD player.
3. Press OPEN/CLOSE to close the disc tray, the playback will automatically start.
  - Some discs may not playback automatically, you can press ENTER/PLAY button to start playback.
4. Some discs may start playback with a menu, use the cursor button on the remote control to select menu options and press ENTER/PLAY to start, or press digits to select a menu options directly.

### Stop playback

1. Press STOP ■ button to go to stop mode, the TV screen will show the start logo. As some disc the player can recall the location where stopped, such as DVD.
2. Press ENTER/PLAY to playback to resume playback from the location where playback is stopped or from the beginning of the disc.
3. Press STOP twice to stop completely.

### Previous and Next

During playing, press PREV ◀◀ key can back to start of this chapter, then each press this key will skip a chapter still the start of the disc. Each press of NEXT ▶▶ key during playing will skip the current chapter and play the next one.

### Fast forward and Fast reverse

1. Press F.FWD ▶▶ to fast forward through the disc. Each time the F.FWD ▶▶ button is pressed, the fast forward motion speed changes.
2. Press ENTER/PLAY to resume normal playback.
3. Press F.REV ◀◀ to fast reverse through the disc. Each time the F.REV ◀◀ button is pressed, the fast reverse motion speed changes.
4. Press ENTER/PLAY to resume normal playback.

### Pause/Step playback

1. Press PAUSE/STEP II/III ▶ first time to pause playback (still mode). The sound will be muted during still mode.
2. Press PAUSE/STEP II/III ▶ continuous to single step forward to the next frame in the video.
3. Press ENTER/PLAY resume normal playback.

### NOTES:

1. "⊙" may appear on the TV screen during operation. A "⊙" means that the operation is not permitted by the unit or the disc.
2. This unit controlled by CPU, under setting mode, there may be screen save, press any key to activate the unit.

**IMPORTANT NOTE:**

ALL DESCRIBING FUNCTION IS FOR DVD DISCS. IF YOU PLAY OTHER FORMAT DISC, THE OPERATION AND DISPLAY ON SCREEN WILL BE DIFFERENT.

**OSD**

Press this button and the screen will display some information about disc, such as : " Title Elapsed " , " Title Remain " , " Chapter Elapsed " , " Chapter Remain " and " Display Off ".

**V.MODE**

This button can set VIDEO output among "CVBS", "YUV" or "P-Scan".

Note: The screen disappear when press this button, press this button continuously until the screen turn normal.

**SUBTITLE**

Press this button and the screen will display "SUBTITLE 01/XX XXXXX", "01" indicates the ordinal number of this language; "XX" indicates total number of language; "XXXXXX" indicates the language of country. (the number of language depends on disc).

**TITLE**

According to some DVD discs, press this button will display "Title Menu", the unit will play from the disc head or you can use digits to select tracks preferred. (Depending on DVD)

**ANGLE**

For discs with this feature, pressing this key to view action from different angles.(Depending on the DVD)

**ZOOM**

Each time pressed, the picture enlarges.

In this mode, you can move the picture with CURSOR button.

**SEARCH**

Follow this operation :

first	Title 02/10 Time ■ : :
twice	Title 02/10 Chapter ■/32
third	Chapter 01/32 Time ■ : :

According to operation, you could choose point that you want to play.

**VOLUME and MUTE**

Press "+" at the right of VOLUME to increase volume, "-" to decrease to volume. The first press of MUTE will display MUTE (no voice), the second press will return to normal playback.

**REPEAT**

Follow this operation :

first	↺ Chapter
twice	↺ Title
third	↺ All

the fourth pressed will cancel repeat.

**MENU**

Press this button and the screen will display " Root Menu ", select item according to your preference. (This key is valid to DVD disc possessing multi-layer menu.)

**PROGRAM**

Press this button and the screen will display info window , press digits button to input the program number what you want, when finished, move the cursor to select the " Start " logo, at this time the unit will start program playback and the screen will display "Program" logo.

If you want to cancel this function, press " STOP " and then press "ENTER/PLAY" .

**AUDIO CHANNEL CHOOSE**

Press this button on remote control to change the mode of audio.

For example: Audio 1/2: AC 3 2 CH English  
Audio 2/2: AC 3 5.1 CH English

 
**A-B REPEAT**

Press "A-B RPT " to begin start-point, press again to set an end point and complete setting. The selected section A-B will be repeated. The third press will cancel this function.

**MP3 PLAYBACK**

When playing MP3 disc, a navigation menu will be displayed automatically if the disc is loaded in succession.

In the menu, use UP or DOWN button in the cursors to choose folder, then press "ENTER/PLAY" button to confirm. In the folder, use UP or DOWN button in the cursors to select the file, then press "ENTER/PLAY" to play this file. In this page, use LEFT button in the cursors can return previous menu, press PREV or NEXT can go to the previous or next page.

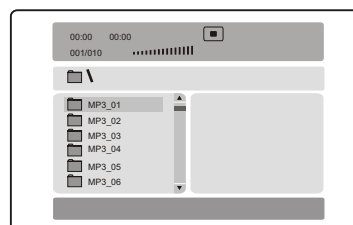
**KODAK PICTURE CD DISC PLAYBACK**

When playing Kodak Picture CD disc, a navigation menu will be displayed automatically if the disc is loaded in succession. In the menu, use UP or DOWN in the cursor to choose folder, then press "ENTER/PLAY" button to confirm. in the folder, use UP or DOWN in the cursor to select a file, then press "ENTER/PLAY" to play. Each picture in the Kodak Picture CD will be displayed consecutively in a slide-show fashion and will be scaled to fit in the whole TV screen. If you want to return the menu, press MENU button.

If you desire to display an image indefinitely, press the PAUSE button. To view the next or previous picture, press NEXT or PREVIOUS button. To resume the slide-show, press the "ENTER/PLAY" button.

**IMPORTANT NOTE:** Quality of pictures displayed on the screen is highly dependent on the viewing device.

**JPEG DISC PLAYBACK**

When playing JPEG disc, a navigation menu will be displayed automatically if the disc is loaded in succession. In the menu, use UP or DOWN in the cursor to select a file, then press "ENTER/PLAY", the file will be play with aslide-show. press PREV or NEXT to select the previous or the next picture. Press PAUSE to pause the current picture for enjoying, when press ENTER/PLAY, it will return to normal playing.

- When you press **SETUP** key on the remote control, the setup menu will be displayed.

1. Within the setup menu, you can use UP, DOWN, LEFT and RIGHT buttons on the remote control to move the cursor, and then press the ENTER/PLAY button to make your selection. Press LEFT can return the previous menu.

2. To exit setup menu, you can press SETUP menu.

## 1. GENERAL SETUP PAGE

Setup TV screen format, video type and all DVD functions.

### 1.1 TV DISPLAY

General	Audio	Dolby	Video	Preference
.. General Setup Page ..				
TV Display	PS		Normal/PS	
Angle Mark	On		Normal/LB	
OSD Lang	Eng		Wide	
SPDIF Output				
Captions	Off			
Set TV Display Mode				

The TV Display which select the different ratio of display format and the screen of TV, There are various types of display on screen for different matches between Disc and TV (Please see page 19: Multi-image ratio mode)

#### Note:

- No matter which display format is selected, a picture recorded in standard 4:3 format always displays in the 4:3 aspect ratio.
- The display format of DVD titles may vary; please refer to the information that accompanies your specific DVD title.
- If the DVD title is recorded in 16:9 wide display format while the TV is a standard 4:3 screen, horizontal compression of the image will result.
- Some DVD titles may be recorded in special formats. In such cases, the DVD titles will always appear on the screen in their original format, regardless of which TV display format you select.

### 1.2 ANGLE MARK

**ANGLE MARK:** Users can select a particular camera angle when playing a DVD which offers multiple angles.

General	Audio	Dolby	Video	Preference
.. General Setup Page ..				
TV Display	PS			
Angle Mark	On		On	
OSD Lang	Eng		Off	
SPDIF Output				
Captions	Off			
Set Angle Mark				

### 1.3 OSD LANGUAGE

**On Screen Display (OSD) Language:** Users can select the whole setup menu and on-screen display language.

General	Audio	Dolby	Video	Preference
.. General Setup Page ..				
TV Display	PS			
Angle Mark	On			
OSD Lang	Eng		English	
SPDIF Output				
Captions	Off			
Set OSD Language				

### 1.4 SPDIF OUTPUT

**SPDIF OUTPUT MODE:** Sets the audio outputs.

General	Audio	Dolby	Video	Preference
.. General Setup Page ..				
TV Display	PS			
Angle Mark	On			
OSD Lang	Eng			
Spdif Output			Spdif Off	
Captions	Off		Spdif/RAW	
			Spdif/PCM	
Set Spdif				

This DVD player includes three kinds of audio output:

1. **SPDIF OFF:** An analog surround sound format is output through the back-panel connections for 2-CH audio out or 5.1 CH audio out.
2. **SPDIF/RAW or SPDIF/PCM:** This surround sound format is output to a Dolby Digital / DTS decoder through the optical and coaxial connectors on the back-panel of the product.

## 1.5 CAPTIONS

**CAPTIONS:** For hearing-impaired people, the picture can be displayed with recorded explanatory captions.

General	Audio	Dolby	Video	Preference
.. General Setup Page ..				
TV Display	PS			
Angle Mark	On			
OSD Lang	Eng			
Spdif Output				
Captions	Off		On	
			Off	
Closed Caption				

## 2. SPEAKER SETUP PAGE

## 2.1 SPEAKER SETUP PAGE

**DOWNMIX MODE:** sets front speakers to LT/RT, STEREO.

General	Audio	Dolby	Video	Preference
.. Speaker Setup Page ..				
Downmix		LT/RT Stereo		
Set Downmix Mode				

### 3. DOLBY DIGITAL SETUP PAGE

### 3.1 DUAL MONO

**DUAL MONO:** If your amplifier / decoder has Dolby Digital output, you may select stereo, left mono, right mono, or mixed mono mode for your amplifier decoder.

General	Audio	Dolby	Video	Preference
.. Dolby Digital Setup ..				
Dual Mono		Stereo		
Dynamic		L-Mono		
		R-Mono		
		Mix-Mono		
Dual Mono ( 1 , 1 ) Setup				

### 3.2 DYNAMIC

**DYNAMIC:** this function is generally used when playing high volume programs at night, in order not to disturb the neighbor. This setting can dynamically lower the volume and still keep the original tone quality. This is the range, measured in decibels(dB), between the loudest and the quietest sound registers in a soundtrack.

General	Audio	Dolby	Video	Preference
<p>.. Dolby Digital Setup ..</p> <div> <div> <p>Dual Mono</p> <p>Dynamic</p> </div> <div> <p>FULL</p> <p>3/4</p> <p>1/2</p> <p>1/4</p> <p>OFF</p> </div> </div> <p>Set Drc To Full</p>				

## 4. VIDEO SETUP PAGE

### 4.1 COMPONENT

**COMPONENT:** Sets the video output.

General	Audio	Dolby	Video	Preference
.. Video Setup Page ..				
Component	CVBS		CVBS	
TV Mode			YUV	
Sharpness	Low			
Brightness	00			
Contrast	00			
Component				

### 4.4 BRIGHTNESS

**BRIGHTNESS:** Sets the brightness level of video output.

General	Audio	Dolby	Video	Preference
.. Video Setup Page ..				
Component	YUV			
TV Mode				
Sharpness	Low			
Brightness	00			
Contrast	00			
Brightness				

### 4.2 TV MODE SETUP PAGE

**TV MODE:** Sets the scan mode to same of your TV.

General	Audio	Dolby	Video	Preference
.. Video Setup Page ..				
Component	YUV			
TV Mode			PSCAN	
Sharpness	Low		Interlace	
Brightness	00			
Contrast	00			
Set P-SCAN On/Off				

Press right button the TV will display below.

General	Audio	Dolby	Video	Preference
.. Video Setup Page ..				
Brightness 0				
Brightness				

### 4.3 SHARPNESS

**SHARPNESS:** Sets the sharpness level of video output.

General	Audio	Dolby	Video	Preference
.. Video Setup Page ..				
Component	YUV			
TV Mode				
Sharpness	Low		High	
Brightness	00		Medium	
Contrast	00		Low	
Sharpness				

Press LEFT / RIGHT button to adjust, then press ENTER/PLAY button to confirm and return upon menu.



## 4.5 CONTRAST

**CONTRAST:** Sets the contrast level of Video output.

General	Audio	Dolby	Video	Preference
.. Video Setup Page ..				
Component	YUV			
TV Mode				
Sharpness	Low			
Brightness	00			
Contrast	00			
Contrast				

Press right button the TV will display below.

General	Audio	Dolby	Video	Preference
Contrast 0				
Contrast				

Press LEFT / RIGHT button to adjust, then press ENTER/PLAY button to confirm and return upon menu.

## 5. PREFERENCE SETUP PAGE

The preference setting is active only when no disc, and the setting is effective on each time power on till exchanging the saved setting.

### 5.1 TV TYPE

**TV TYPE:** This player supports different TV output, including MULTI(Auto), NTSC, and PAL systems.

- If your TV support only NTSC or PAL and had you inadvertently selected the wrong TV type, the TV screen will become flickering and black-and-white. In this case, you should press the SETUP button to set as following **Note**.

General	Audio	Dolby	Video	Preference
.. Preference Page ..				
TV Type	AUTO		PAL	
Audio	Eng		Multi	
Subtitle	Off		NTSC	
Disc Menu	Eng			
Parental				
Password				
Default				
Set TV Standard				

### Note: How to Set the TV Type?

- You may switch the NTSC/PAL setting of the DVD player to match the video signal of your TV.
- The table below shows what kinds of disc are compatible with each setting (MULTI, PAL and NTSC)

Disc		Output Format		
Type	Format	Selected TV System Mode		
		NTSC	PAL	MULTI
DVD	NTSC	NTSC	PAL	NTSC
	PAL	-----	PAL	PAL

### 5.2 AUDIO

**AUDIO:** Sets the preferred audio language as the default when playing DVD. (IF DVD support these languages)

General	Audio	Dolby	Video	Preference
.. Preference Page ..				
TV Type	AUTO	English		
Audio	Eng	French		
Subtitle	Off	Spanish		
Disc Menu	Eng	Chinese		
Parental		Japanese		
Password		Korean		
Default		Russian		
		Thai		
Preferred Audio Language				

### 5.3 SUBTITLE

**SUBTITLE:** Sets the preferred subtitle language as the default when playing DVD.(if DVD support these languages)

General	Audio	Dolby	Video	Preference
.. Preference Page ..				
TV Type	AUTO		French	
Audio	Eng		Spanish	
Subtitle	Off		Chinese	
Disc Menu	Eng		Japanese	
Parental			Korean	
Password			Russian	
Default			Thai	
Preferred Subtitle Language				

### 5.4 DISC MENU

**DISC MENU:** Sets the preferred menu language as the default when playing DVD.(if DVD support these languages)

General	Audio	Dolby	Video	Preference
.. Preference Page ..				
TV Type	AUTO		English	
Audio	Eng		French	
Subtitle	Off		Spanish	
Disc Menu	Eng		Chinese	
Parental			Japanese	
Password			Korean	
Default			Russian	
Preferred Menu Language				

### 5.5 PARENTAL

**PARENTAL:** The parental control function works in conjunction with the different censorship classes assigned to DVDs. These classes help to control the types of DVDs that the family watches, There are up to 8 censorship classes for DVDs.

**Note:**

If you change this set, you must input password.  
(Initial password : 138968)

General	Audio	Dolby	Video	Preference
.. Preference Page ..				
TV Type	AUTO		1 KID SAF	
Audio	Eng		2 G	
Subtitle	Off		3 PG	
Disc Menu	Eng		4 PG 13	
Parental			5 PGR	
Password			6 R	
Default			7 NC 17	
Set Parental Control				

### 5.6 PASSWORD MODE

**PASSWORD CHANGE:** you can change the password, please type 6 numerals as new password.

**Note:** Be sure remember new password. If you forget, please contact dealer.

General	Audio	Dolby	Video	Preference
.. Preference Page ..				
TV Type	AUTO			
Audio	Eng			
Subtitle	Off			
Disc Menu	Eng			
Parental				
Password			Change	
Default				
Change Password				

General	Audio	Dolby	Video	Preference
<div> <div>Old Password</div> <div>New Password</div> <div>Confirm PWD</div> <div>OK</div> </div>				

### 5.7 DEFAULT

**DEFAULT:** Resets to all the manufacturer's original settings for this DVD player(except password), Press ENTER/PLAY to perform the reset.

General	Audio	Dolby	Video	Preference
.. Preference Page ..				
TV Type	AUTO			
Audio	Eng			
Subtitle	Off			
Disc Menu	Eng			
Parental				
Password				
Default			Reset	
Load Factory Setting				

Please check the following guide for the possible cause and solution for a problem before contacting the nearest service center or dealer for repairs.

**SYMPTOMS AND CORRECTIONS**

SYMPTOMS	CORRECTIONS
No power	Check to make sure that the power connection is secure.
No picture	Make sure the connection between the player and the TV is secure.
	Make sure that the TV is in good working condition.
No sound	Make sure the connection between the player and other devices are secure.
	Make sure that the TV and AMP are in good working condition and setup properly.
Failed to Play	Check that the disc is properly inserted.
	Clean the disc.
Failed to respond to remote control	Remove obstacles between remote control and unit.
	Aim remote control at the sensor on the front panel
	Check batteries and replace them if necessary.
Picture Disturbance	Check the disc for dirt and scratches. Clean or replace disc.
	Shut down the unit, wait ten seconds, and restart the unit.
Failed to work with keys	Power surges or brown outs or other electrical phenomena. Shut down the unit, wait ten seconds, and restart the unit.









DVD player is the ticket of your home theater. Every technical index of this machine is far more superior to any previous audio-visual equipment. This completely new digital technology has compressed the audio visual effect of cinema into 12cm diameter disc which is the same in dimension as the CD disc. Especially the Dolby digital output can provide prominent digital surround effect. It can also be compatible with the existing CD, CD-R and CD-RW (It can not be compatible with some CD-RW discs).

### Compare DVD disc with other discs:

	DVD				LD	CD
Encode method	Digital/MPEG II				Analog	Digital
Capacity	Single-side single-layer 4.7G	Double-side single-layer 8.5G	Single-side double-layer 9.4G	Double-side double-layer 17G	Single-side 60 minutes double-side 120 minutes	650MB
Playing Time	133 minutes	242 minutes	266 minutes	484 minutes		74 minutes
Disc diameter	12cm/8cm				30cm/20cm	12cm/8cm
Horizontal resolution	More than 500 line				No more than 430 line	
Picture proportion	Multiple kinds				One kind	
Subtitle	32 kinds				16 kinds at most	
Language	8 kinds				4 kinds at most	
Sound quality	48KHz, 96KHz/ 6, 20, 24bit				44.1KHz/ 16bit	44.1KHz/ 16bit

## SETTING THE TV SCREEN SIZE

Multi-aspect ratio suit to different TV screen size.

 
Picture format on Disc	TV Screen Size		
	4:3		16:9
	Pan Scan	Letter-box	Wide Screen
4:3 			
16:9 			

## Functions supported by DVD discs

There are many functions available on DVD discs and the functions vary per player and per manufacturer.



Regional code and signal system



Picture proportion modes



Dolby digital surround sound



Parent lock



Number of languages



Angles for viewing



Subtitle languages



Closed Caption

**System and Outputs**

VF Signal system	NTSC/PAL
Frequency response	CD: 20Hz-20KHz(EIAJ) DVD: 20Hz-44KHz(96KHz)(Sample result) 20Hz-22KHz(48KHz)(Sample result)
Audio S/N ratio	> 90 dB
Video/Picture	MPEG1 V2.0; MPEG2
Audio	MPEG LAYER2 standard
Audio output (analog audio)	Electric level output: 1.8V      resistance: 10K
Audio output (digital audio)	Electric level output: 0.5Vp--p      resistance: 75
Video output	Electric level output: 1.0Vp--p      resistance: 75      Unbalanced negative
S-Video output	Electric level output: brightness(Y)1.0Vp--p,      resistance: 75 Chrominance (C): 0.286Vp--p,      resistance: 75
Component video (Y, CB,CR)	Electric level output: 0.7Vp--p,      resistance: 75

**General**

Power	110-240V~      60Hz
Power consumption	< 15W
Product Dimensions	L: 280mm    W: 254mm    H: 44mm
Weight	1.8kg
Operating temperature	5°C to 35°C (41°F to 95°F)
Operating humidity	5% to 90%

**Note:** We reserve the right to modify the design without advice!

**DESAY**

Ⓟ 1.4301.xxxx--0